

Versión
en español
al dorso

RCA

Digital Flat Indoor Antenna

Quick Start Guide

ANTB25 OSG 00

Check out setup videos at
www.RCAAntennas.net/Setup

1 Find the best location for your antenna.




TV antennas perform best when facing the direction of the broadcaster's tower.

For help finding your local broadcast towers, go to www.RCAAntennas.net

Antenna Placement Tips

- ✓ Avoid metal surfaces (like a metal stand).
- ✓ Move the antenna close to or in a window.
- ✓ Position the antenna as high as possible.

2 Connect the antenna to your TV.

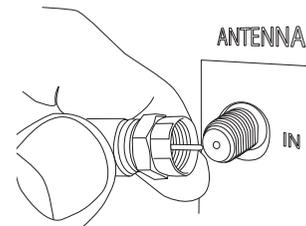

Make sure your TV is turned off. Then connect the antenna's coaxial cable to the antenna input on your TV or digital converter box.

3 Scan for channels on your TV.

Most TVs have a channel scan option in their menu system, many times in a SETUP or CHANNEL menu under ANTENNA.

For detailed instructions on performing a channel scan, see the owner's manual that came with your TV.

STOP!

DO NOT RETURN this product to the store!

Please call our toll-free help line at 1-800-768-1969 or visit RCAAntennas.net

English
version
on back

RCA

Antena Digital Plana para interiores

Guía de inicio rápido

Consulte los videos de configuración en
www.RCAAntennas.net/Setup

1 Encuentre la mejor ubicación para su antena.




Las antenas de TV tienen un mejor desempeño si están orientadas hacia las torres de difusión.

Si necesita ayuda para ubicar las torres de difusión locales, visite www.RCAAntennas.net

Consejos para la ubicación de la antena

- ✓ Evite las superficies de metal (tal como un soporte de metal).
- ✓ Coloque la antena en una ventana o cerca de ella.
- ✓ Coloque la antena lo más alto posible.

2 Conecte la antena al TV.

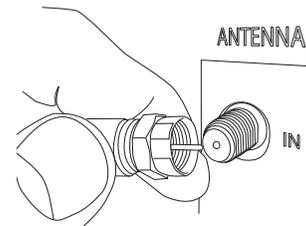

Asegúrese que el TV esté apagado. Luego conecte el cable coaxial de la antena a la entrada de la antena en el televisor o caja del convertidor digital.

3 Busque canales en su TV.

La mayoría de televisores tienen una opción de búsqueda de canales en el menú del sistema, con frecuencia se encuentra en el menú de CONFIGURACIÓN o CANALES en la sección ANTENA.

Para obtener instrucciones detalladas sobre cómo llevar a cabo una búsqueda de canales, consulte el manual del propietario incluido con el TV.

¡ALTO!

NO DEVUELVA este producto a la tienda.

Llame a nuestra línea de ayuda libre de cargo por el 1-800-768-1969 o visite RCAAntennas.net.